



Model No.	IBM Number
1530 134	060 1530 134

1530 134

## Nibbler 1530 134 (Cont'd)

POS. NO.	PART NO.	PCS/UNIT	DESCRIPTION	POS. NO.	PART NO.	PCS/UNIT	DESCRIPTION
25	2 605 500 064	1	Gear cover 1530 134	101	2 605 108 041	1	Motor housing
26	2 600 914 011	1	Needle bushing	102	2 604 010 607	1	Armature, 115V
27	2 605 806 312	1	Gear housing	103	2 600 101 023	1	Shim 0.3mm, as required
28	2 916 650 011	1	Retainer	103.1	2 600 101 022	1	Shim 0.2mm, as required
30	1 900 900 274	1	Deep-groove ball bearing	103.2	2 600 101 020	1	Shim 0.5mm, as required
31	2 600 550 017	1	Disc spring	104	2 600 150 004	1	Shim
32	2 606 334 040	1	Ring gear	105	1 900 905 011	1	Deep-groove ball bearing
33	3 605 700 042	1	Intermediate flange	106	2 604 220 428	1	Field, 115V
34	2 600 108 002	1	Felt washer	107	2 603 435 015	2	Recessed head screw
35	2 600 500 002	1	Plate washer	108	2 602 319 005	1	Adjusting slide
36	2 600 905 015	1	Deep-groove ball bearing	109	2 602 026 015	1	Switch handle
37	2 916 660 008	1	Retainer	110	2 601 328 034	1	Cover disc
38	2 916 690 003	7	Spring lock washer	111	2 601 323 021	2	Brush holder
39	2 910 021 138	4	Fillister head screw	112	Pos. 801	2	Carbon brush set
40	2 910 021 134	3	Fillister head screw	114	2 604 652 007	2	Spiral spring
41	2 910 211 021	4	Self-tapping screw	115	2 604 460 022	1	Cord set
42	2 600 400 008	1	Ring	116	2 600 703 013	1	Grommet
43	2 916 080 908	2	Locking washer	117	2 601 035 001	1	Cable clip
44	1 600 100 611	2	Shim	118	2 910 211 019	2	Self-tapping screw
45	1 903 201 020	20	Needle roller	119	2 910 211 005	4	Self-tapping screw
46	2 606 316 095	2	Cylindrical gear	120	2 607 200 093	1	On-off switch
47	2 603 105 021	2	Bearing pin	121	2 603 410 001	4	Fillister head screw
48	2 603 414 003	1	Hex socket head cap screws	123-	2 604 448 034	2	Cable
49A	2 608 639 904	1	Die, Trapexoidal four position	124	2 604 448 039	1	Cable
49.1A-	2 608 639 900	1	Flat stock swivel die	125	2 604 448 040	1	Cable
49.2A-	2 608 639 901	1	Trapezoidal swivel die	126	3 601 106 000	1	Nameplate blank
50A	2 608 639 013	1	Punch	127	1 600 026 000	1	Intermediate piece
52	2 603 455 006	1	Union screw	128	2 600 508 036	1	Housing cover
53	2 603 314 001	1	Union nut	129	2 910 601 421	1	Self-tapping screw
54	2 600 422 005	1	Bushing	130	2 601 110 243	1	Label
55	2 603 104 001	1	Piston	131	3 601 103 011	1	Label
56	2 603 100 003	1	Bearing pin	139	2 910 211 007	1	Self-tapping screw
57	2 602 001 001	1	Connecting rod	200-	1 900 452 012	2	Wire barrel
58	2 600 913 035	1	Needle roller cage	801	2 604 320 908	1	Carbon brush set
59	2 606 122 001	1	Eccentric shaft				
60	2 600 224 009	2	Retainer				

- = Not Illustrated  
A = Accessory